

AMERICAN & OHIO LOCOMOTIVE CRANE COMPANY

A Division of ERS Industries, Inc.

Model Number: _____ **Serial Number:** _____

Pick and Carry Conditions

This crane may carry loads which are suspended from the boom and do not exceed the stated lift capacity of the crane, provided the following conditions are met:

The track and roadbed must be in good condition to properly support the crane. Improper roadbed support or rail strength may cause the rail to kink or buckle when traveling with a load. It is the responsibility of the operator to insure that the rail and roadbed conditions are sufficient for pick and carry operation.

The freely suspended load shall be positioned over the track centerline as near to the ground as possible without dragging and shall be restrained by taglines to prevent movement fore and aft or side to side.

Sliding wedges or side blocking cams must be used between the truck side frames and carbody when traveling with a load.

Travel starting and stopping must be smooth and gentle. No sudden starts or stops are permitted when traveling with a load. Travel speed should not exceed average walking speeds (2 – 3 mph). No other crane operations are permitted while traveling with a load.

All other definitions and operational requirements as stated on the Original Equipment Manufacturer's Standard Load Chart shall apply when traveling with a load.

119285-05